
TOSHIBA



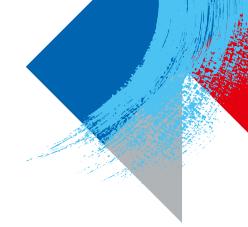

How Does High Temperature Affect Your HDDs?

Importance of HDD temperature control

The internal temperature of a hard drive is an important factor not only in its correct functioning but also when it comes to the reliability and lifetime of a storage system. The mechanical components of the hard disk drive, especially the fluid-dynamic bearing of the platter-stack spindle, wear out faster at higher temperatures as the fluid oil leaks out at a faster rate.

So, controlling the temperature of hard drives in storage systems is necessary to ensure optimal functionality and high reliability.

How to measure the hard drive temperature

Modern hard drives have a built-in internal temperature sensor, which can be read via the S.M.A.R.T parameter, by tools within

the operating system, or by the management tools of the host bus adapter or RAID controller.

Open-E JovianDSS GUI provides access to management tools of Broadcom and Microchip-Adaptec management tools.

- In case of Microchip-Adaptec: <node-ip-address>:8443, login with aac, password raid
- In case of Broadcom: <node-ip-address>:9000, login with root, password admin

By expanding controller-, enclosure-, and port-view, the connected hard disk drives are listed and temperature is displayed.

On the operating system level, smart values can be read out with "smartmontools", a common freeware tool available for windows and Linux. Command-line is:

```
% smartctl -a <device-identifier>
=== START OF INFORMATION SECTION ===
                  Toshiba MG09ACA... Enterprise capacity HDD
Model Family:
Device Model:
                  TOSHIBA MG09ACA18TE
Vendor Specific SMART Attributes with Thresholds:
ID# ATTRIBUTE NAME
                              FLAG
                                        VALUE WORST THRESH TYPE
                                                                        UPDATED WHEN FAILED
                                                                                                RAW VALUE
1 Raw_Read_Error_Rate
                              0x000b
                                        100
                                               100
                                                     050
                                                              Pre-fail Always
                                                                                                0
2 Throughput_Performance
                              0 \times 00005
                                        100
                                               100
                                                      050
                                                              Pre-fail Offline
                                                                                                Λ
3 Spin_Up_Time
                              0x0027
                                        100
                                               100
                                                      001
                                                              Pre-fail Always
                                                                                                8400
4 Start_Stop_Count
                              0x0032
                                        100
                                               100
                                                      000
                                                              Old_age Always
                                                                                                110
5 Reallocated Sector Ct
                              0 \times 0033
                                               100
                                                      010
                                                              Pre-fail Always
                                               100
7 Seek_Error_Rate
                              0x000b
                                        100
                                                      050
                                                              Pre-fail Always
                                                              Pre-fail Offline
8 Seek_Time_Performance
                              0 \times 0005
                                        100
                                               100
                                                      050
                                                                                                0
9 Power_On_Hours
                              0x0032
                                        098
                                               098
                                                      000
                                                              Old_age Always
                                                                                                1067
10 Spin_Retry_Count
                              0x0033
                                                              Pre-fail Always
                                               100
12 Power_Cycle_Count
                              0x0032
                                               100
                                                      000
                                                              Old_age
                                                                       Always
23 Helium_Condition_Lower
                                                              Pre-fail Always
                              0 \times 0.023
                                        100
                                               100
                                                      075
                                                                                                0
                                                              Pre-fail Always
24 Helium_Condition_Upper
                              0 \times 0.023
                                        100
                                               100
                                                      075
                                                                                                0
27 MAMR Health Monitor
                              0x0023
                                        100
                                               100
                                                      030
                                                              Pre-fail Always
                                                                                                853600
191 G-Sense_Error_Rate
                              0x0032
                                               100
                                                              Old_age Always
192 Power-Off Retract Count 0x0032
                                        100
                                               100
                                                              Old age Always
                                                      000
193 Load_Cycle_Count
                                               100
                              0x0032
                                        100
                                                      000
                                                              Old_age Always
                                                                                                156
194 Temperature_Celsius
                              0 \times 0022
                                        100
                                               100
                                                      000
                                                              Old_age Always
                                                                                                36 (Min/Max 16/45)
196 Reallocated_Event_Count 0x0033
                                        100
                                               100
                                                      010
                                                              Pre-fail Always
                                                                                                0
```

Picture 1:

Command line and S.M.A.R.T. read out.

© Toshiba Electronics Europe GmbH

TOSHIBA

For this example, the hard disk drive's internal temperature is currently 36 °C. The initial starting temperature was 16 °C and its historic maximum was 45 °C.

Temperature is too high?

The manufacturer specifies the correct functionality of a hard disk drive within a certain range. When specifically looking at Enterprise HDDs, a controlled data center-type of cooling is assumed, hence they are usually specified to operate from 5 to 60 °C, with an ambient temperature of max. 55 °C. NAS drives are specified from 5 to 65 °C and surveillance-specific models from 0-70 °C (it's because surveillance systems may operate in less stable environments).

Temperature and Reliability

The average hard drive temperature has a direct impact on its reliability. The reliability of a hard drive, measured in Mean Time To Failure (MTTF), will only be achieved if the average hard drive temperature stays below 40 °C. Average here means that periods with more than 40 °C will need to be compensated by periods with less than 40 °C. In data center environments with active cooling, the user should mind that the temperature of 40 °C is never exceeded.


A typical enterprise hard drive is rated with an MTTF of 2 Mio. hours. MTTF can be translated into an "annualized failure rate" (AFR) using the following formula:

AFR = 1-e(-8760h/MTTF[h]) (1 year = 8760 hours)

This exponential formula assumes that the already failed drives have to be considered when calculating the failure rate for the remaining drives. With low failure rates, the formula can be simplified to:

AFR[%] =
$$\frac{8760[h]}{MTTF[h]} \cdot 100$$

An MTTF of 2 Mio hours would result in an AFR of 0.438 %. So, within 1000 drives in operation, 4-5 parts would be expected to fail throughout a year of operation.

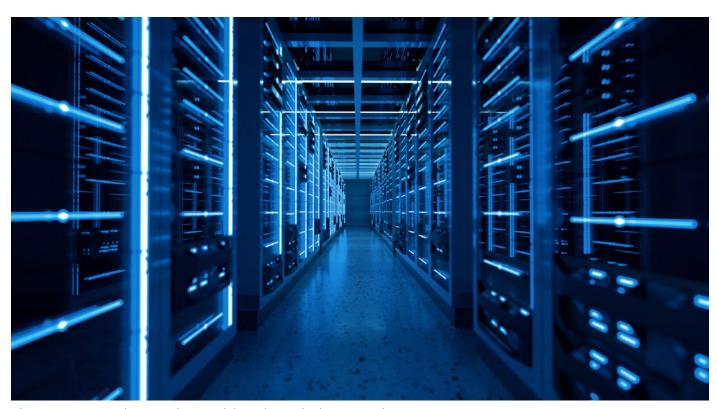

Picture 2: Smart cooling – Modern Hard drives have a built-in internal temperature sensor. (@ .shock/Adobe stock)

But this MTTF/AFR commitment of the HDD manufacturer is restricted to certain conditions, which are:

- Valid only within the warranty period (typically 5 years),
- Valid only when not exceeding excessive workload (less than 550TB/year reading and writing),
- Valid only when not exceeding the maximum power on hours per period (only for non-24/7 models),
- Valid only when not exceeding the average temperature of 40°C.

If any of these conditions are violated, the hard drive may not fail straight away. Specifically, the workload limitation is not meant in the same way as endurance when referring to SSD write endurance (where a violation would always result in a failure of a component). For a hard drive operating beyond these limits, AFR (annual failure rate) would slowly increase, depending on the level of the violation. The same can be applied when considering a hard drive usage after 5 years of warranted service lifetime – a massive fail should not necessarily be expected, but over time, higher yearly failure rates exceeding a level of 4-5 parts out of 1000 could be experienced outside of the first 5 years.

After exceeding an average temperature of 40 °C, the AFR of 0.438% increases. As a rough indication, each 5 °C over 40 °C could increase the failure rate by around 30%. At 55 °C continual or sustained hard drive temperature, the failure rate is expected to double.

Keeping the average hard drive temperature below 40 °C shouldn't be a problem in any well-designed thermal system with appropriate airflow. However, operating without proper airflow and a set of fans will not facilitate the service and support for the thermal requirements for the 24/7 continuous operation of enterprise drives. In case of operation at room temperature, high room temperatures of >30 °C may result in hard drive temperatures of over 40 °C, but these could be offset with periods of lower temperatures as previously explained.

As for installation in data centers, well-designed thermal servers and JBODs keep the hard drive at a maximum of +10..+15 °C over air inlet temperature. So, air inlet temperatures that are lower than 20 °C will support proper hard drive operations, even if they are stacked in a rear position of a large 4U top-loader JBOD or server.

In such cases where there is a sustained higher HDD temperature of 15 °C over ambient/air-inlet temperature, something

is fundamentally wrong in the thermal design of the system. You should check the airflow/fan operation and analyze the system for potential blockages of the airflow.

Summary

For correct functioning and the highest possible reliability, it is important to observe the temperature of the hard disk drive in operation. Maximum temperatures of 60 °C and more should be avoided by all means, and the average temperature should ideally not exceed 40 °C.



© Toshiba Electronics Europe GmbH

About the author

Rainer Kaese has been with Toshiba for almost 30 years. He initially specialized in application specific ICs, managing the ASIC Design Center, and later the Business Development Team for ASIC- and Foundry Products. He is currently responsible for the introduction of Toshiba's Enterprise HDD products into Datacenters, Cloud Computing and Enterprise applications.

This article was originally published as a guest post on the Open-E blog: open-e.com/blog/



Toshiba Electronics Europe GmbH

Hansaallee 181 40549 Düsseldorf Germany

info@toshiba-storage.com toshiba-storage.com toshiba.semicon-storage.com/eu/storage Copyright © 2022 Toshiba Electronics Europe GmbH. All rights reserved. Product specifications, configurations, prices and component / options availability are all subject to change without notice. Product design, specifications and colours are subject to change without notice and may vary from those shown. Errors and omissions excepted.